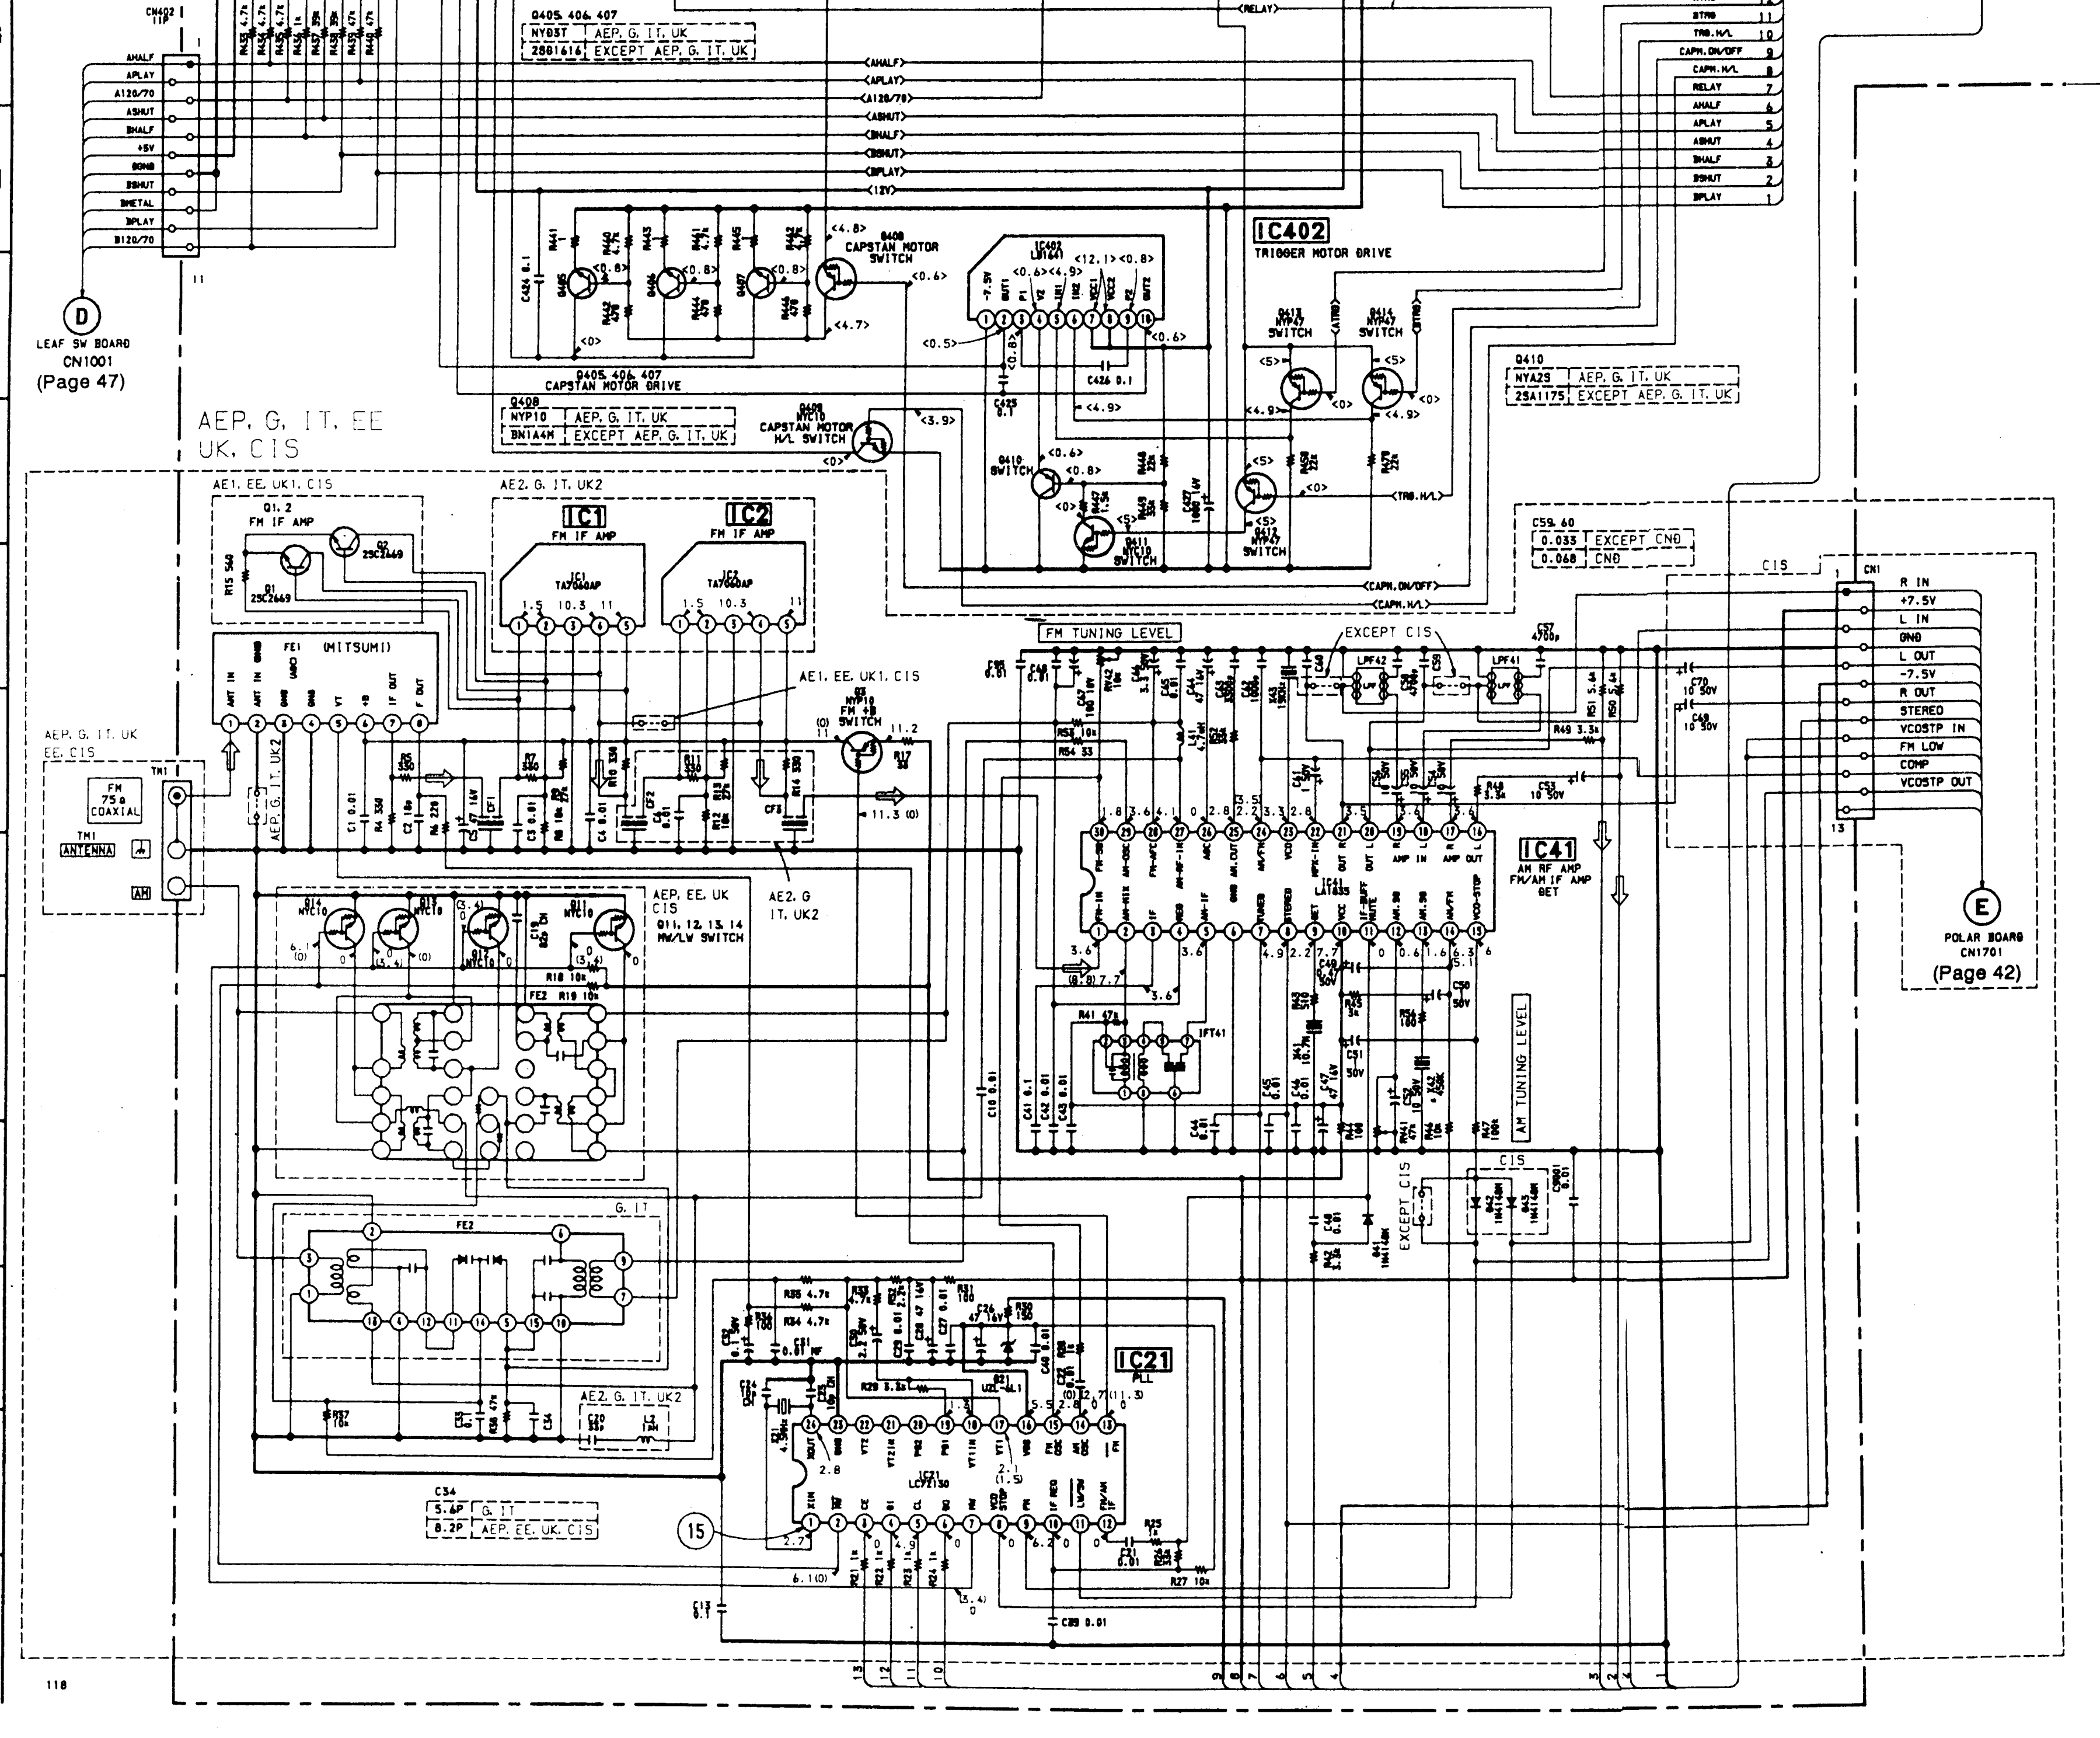
G
H
I
J
K
L
M
N
O
P
Q
R
CN402 11P
AHALF
APLAY
A120/70
ASHUT
BHALF
+5V
BGND
BSHUT
BMETAL
BPLAY
B120/70
D
LEAF SW BOARD
CN1001
(Page 47)
AEP, G, IT, EE
UK, CIS
Q405, 406, 407
NY03T | AEP, G, IT, UK
2SB1616 | EXCEPT AEP, G, IT, UK
Q405, 406, 407
CAPSTAN MOTOR DRIVE
Q408
NYP10 | AEP, G, IT, UK
BN1A4M | EXCEPT AEP, G, IT, UK
Q408
CAPSTAN MOTOR SWITCH
Q409 NYC10
CAPSTAN MOTOR H/L SWITCH
IC402 LB1641
IC402
TRIGGER MOTOR DRIVE
Q410
NYA2S | AEP, G, IT, UK
2SA1175 | EXCEPT AEP, G, IT, UK
Q410 SWITCH
Q411 NYC10 SWITCH
Q412 NYP47 SWITCH
Q413 NYP47 SWITCH
Q414 NYP47 SWITCH
C59, 60
0.033 | EXCEPT CND
0.068 | CND
AE1, EE, UK1, CIS
Q1, 2
FM IF AMP
Q1 2SC2669
Q2 2SC2669
AE2, G, IT, UK2
IC1
FM IF AMP
IC1 TA7060AP
IC2
FM IF AMP
IC2 TA7060AP
FE1 (MITSUMI)
ANT IN
ANT IN GND
GND
GND
VT
+B
IF OUT
F OUT
AEP, G, IT, UK2
AE1, EE, UK1, CIS
Q3 NYP10
FM +B SWITCH
AE2, G
IT, UK2
AEP, G, IT, UK
EE, CIS
TM1
FM 75Ω COAXIAL
TM1 ANTENNA
AM
FM TUNING LEVEL
EXCEPT CIS
LPF42
LPF41
AEP, EE, UK
CIS
Q11, 12, 13, 14
MW/LW SWITCH
Q14 NYC10
Q13 NYC10
Q12 NYC10
Q11 NYC10
FE2
G, IT
AE2, G, IT, UK2
IC41 LA1835
IC41
AM RF AMP
FM/AM IF AMP
DET
IFT41
AM TUNING LEVEL
EXCEPT CIS
CIS
IC21 LC72130
IC21
PLL
C34
5.6P | G, IT
8.2P | AEP, EE, UK, CIS
15
CN1
R IN
+7.5V
L IN
GND
L OUT
-7.5V
R OUT
STEREO
VCOSTP IN
FM LOW
COMP
VCOSTP OUT
E
POLAR BOARD
CN1701
(Page 42)
RELAY
BTRG
TRG.H/L
CAPM.ON/OFF
CAPM.H/L
RELAY
AHALF
APLAY
ASHUT
BHALF
BSHUT
BPLAY